

# REED

## Model R8010

Laser Distance  
Meter



**Instruction  
Manual**

**REED Instruments**

1-877-849-2127 | [info@reedinstruments.com](mailto:info@reedinstruments.com) | [www.reedinstruments.com](http://www.reedinstruments.com)

# Table of Contents

Safety .....	3
Features.....	3
Specifications.....	4
Instrument Description.....	5
Display Description .....	5
Operating Instructions.....	6-10
<i>Measuring Range</i> .....	6
<i>Target Surfaces</i> .....	6
<i>On and Off</i> .....	6
<i>Clear Button</i> .....	6
<i>Reference Level Setting</i> .....	6
<i>Backlight</i> .....	7
<i>Distance Unit Setting</i> .....	7
<i>Single Distance Measurement</i> .....	7
<i>Continuous (Tracking)/Max &amp; Min Measurement</i> .....	7
<i>Addition/Subtraction</i> .....	8
<i>Area Measurement</i> .....	8
<i>Volume Measurement</i> .....	8
<i>Indirect Measurement</i> .....	9
<i>Three Point Measurement</i> .....	9
<i>Measurement Storage</i> .....	10
<i>Troubleshooting</i> .....	10
<i>Care</i> .....	10
Battery Replacement.....	10

**REED Instruments**

1-877-849-2127 | [info@reedinstruments.com](mailto:info@reedinstruments.com) | [www.reedinstruments.com](http://www.reedinstruments.com)